
Fire Sprinkler Underground Process Flow

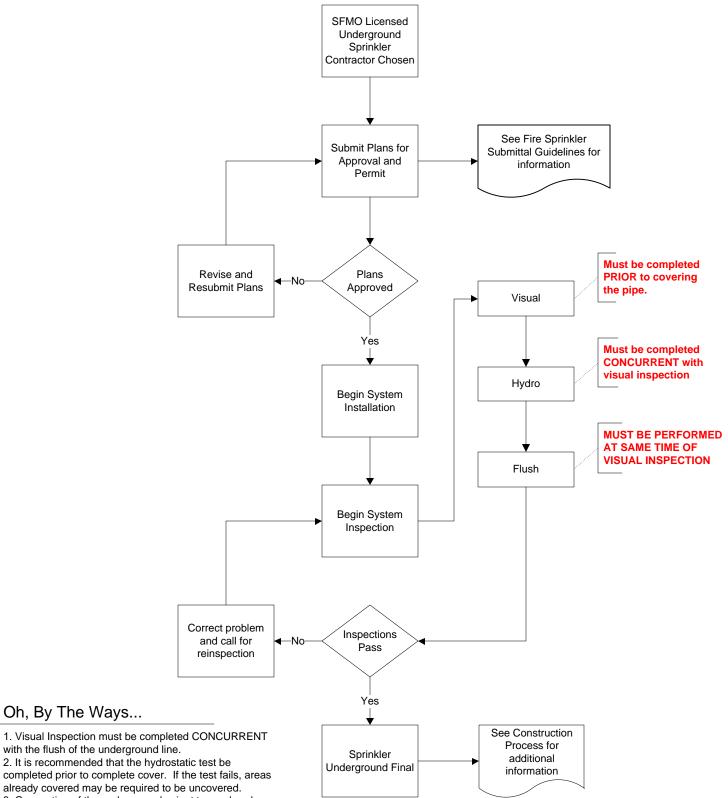



already covered may be required to be uncovered. 3. Connection of the underground spigot to overhead riser prior to flushing, or "stacking the riser", may result in the overhead pipe being required to be flushed.